


1	2	3	4	5	6	7	8																																				
Cabinet schematic — Pump cabinet Pump cabinet Two direct-on-line motor starters, controlled and monitored by a WAGO 750 PLC through a relay interface board.																																											
<table><tr><th>Revision</th><th>Date</th><th>Description</th><th>Created</th><th>Checked</th><th>Approved</th></tr><tr><td>1.1</td><td>2026-09-01</td><td>First release</td><td>SK</td><td></td><td></td></tr><tr><td>1.2</td><td>2026-09-23</td><td>Overload feedback to the PLC</td><td>SK</td><td></td><td></td></tr><tr><td>1.3</td><td>2026-10-02</td><td>TeSys D parts, 24V and GND rails, IEC wire colours</td><td>SK</td><td></td><td></td></tr><tr><td>1.4</td><td>2026-10-05</td><td>Unit tags, links, busbars and rail bonds, energy on fed supplies</td><td>SK</td><td></td><td></td></tr><tr><td>1.5</td><td>2026-10-06</td><td>Three phases on four terminals each, pump n on terminal n+2</td><td>SK</td><td></td><td></td></tr></table>								Revision	Date	Description	Created	Checked	Approved	1.1	2026-09-01	First release	SK			1.2	2026-09-23	Overload feedback to the PLC	SK			1.3	2026-10-02	TeSys D parts, 24V and GND rails, IEC wire colours	SK			1.4	2026-10-05	Unit tags, links, busbars and rail bonds, energy on fed supplies	SK			1.5	2026-10-06	Three phases on four terminals each, pump n on terminal n+2	SK		
Revision	Date	Description	Created	Checked	Approved																																						
1.1	2026-09-01	First release	SK																																								
1.2	2026-09-23	Overload feedback to the PLC	SK																																								
1.3	2026-10-02	TeSys D parts, 24V and GND rails, IEC wire colours	SK																																								
1.4	2026-10-05	Unit tags, links, busbars and rail bonds, energy on fed supplies	SK																																								
1.5	2026-10-06	Three phases on four terminals each, pump n on terminal n+2	SK																																								
Title Pump cabinet				Number SKX-PC-2		Revision 1.5	Revision date 2026-10-06																																				
Customer		Author schematika-examples		Page title Cover		Scope Pump cabinet				Sheet	Page 1 of 11																																
1	2	3	4	5	6	7	8																																				

1	2	3	4	5	6	7	8
Notes The upstream board protects the incoming cable with a C16 breaker. The cable lands there on terminals +EXT-X0, the only part of the upstream board in this model. The relay interface board -U2 has its own drawing set. These pages show it only as its two headers inside a dash-dot outline.							
Title Pump cabinet				Number SKX-PC-2	Revision 1.5	Revision date 2026-10-06	
Customer	Author schematika-examples	Page title Notes		Scope Pump cabinet	Sheet	Page 2 of 11	
1	2	3	4	5	6	7	8

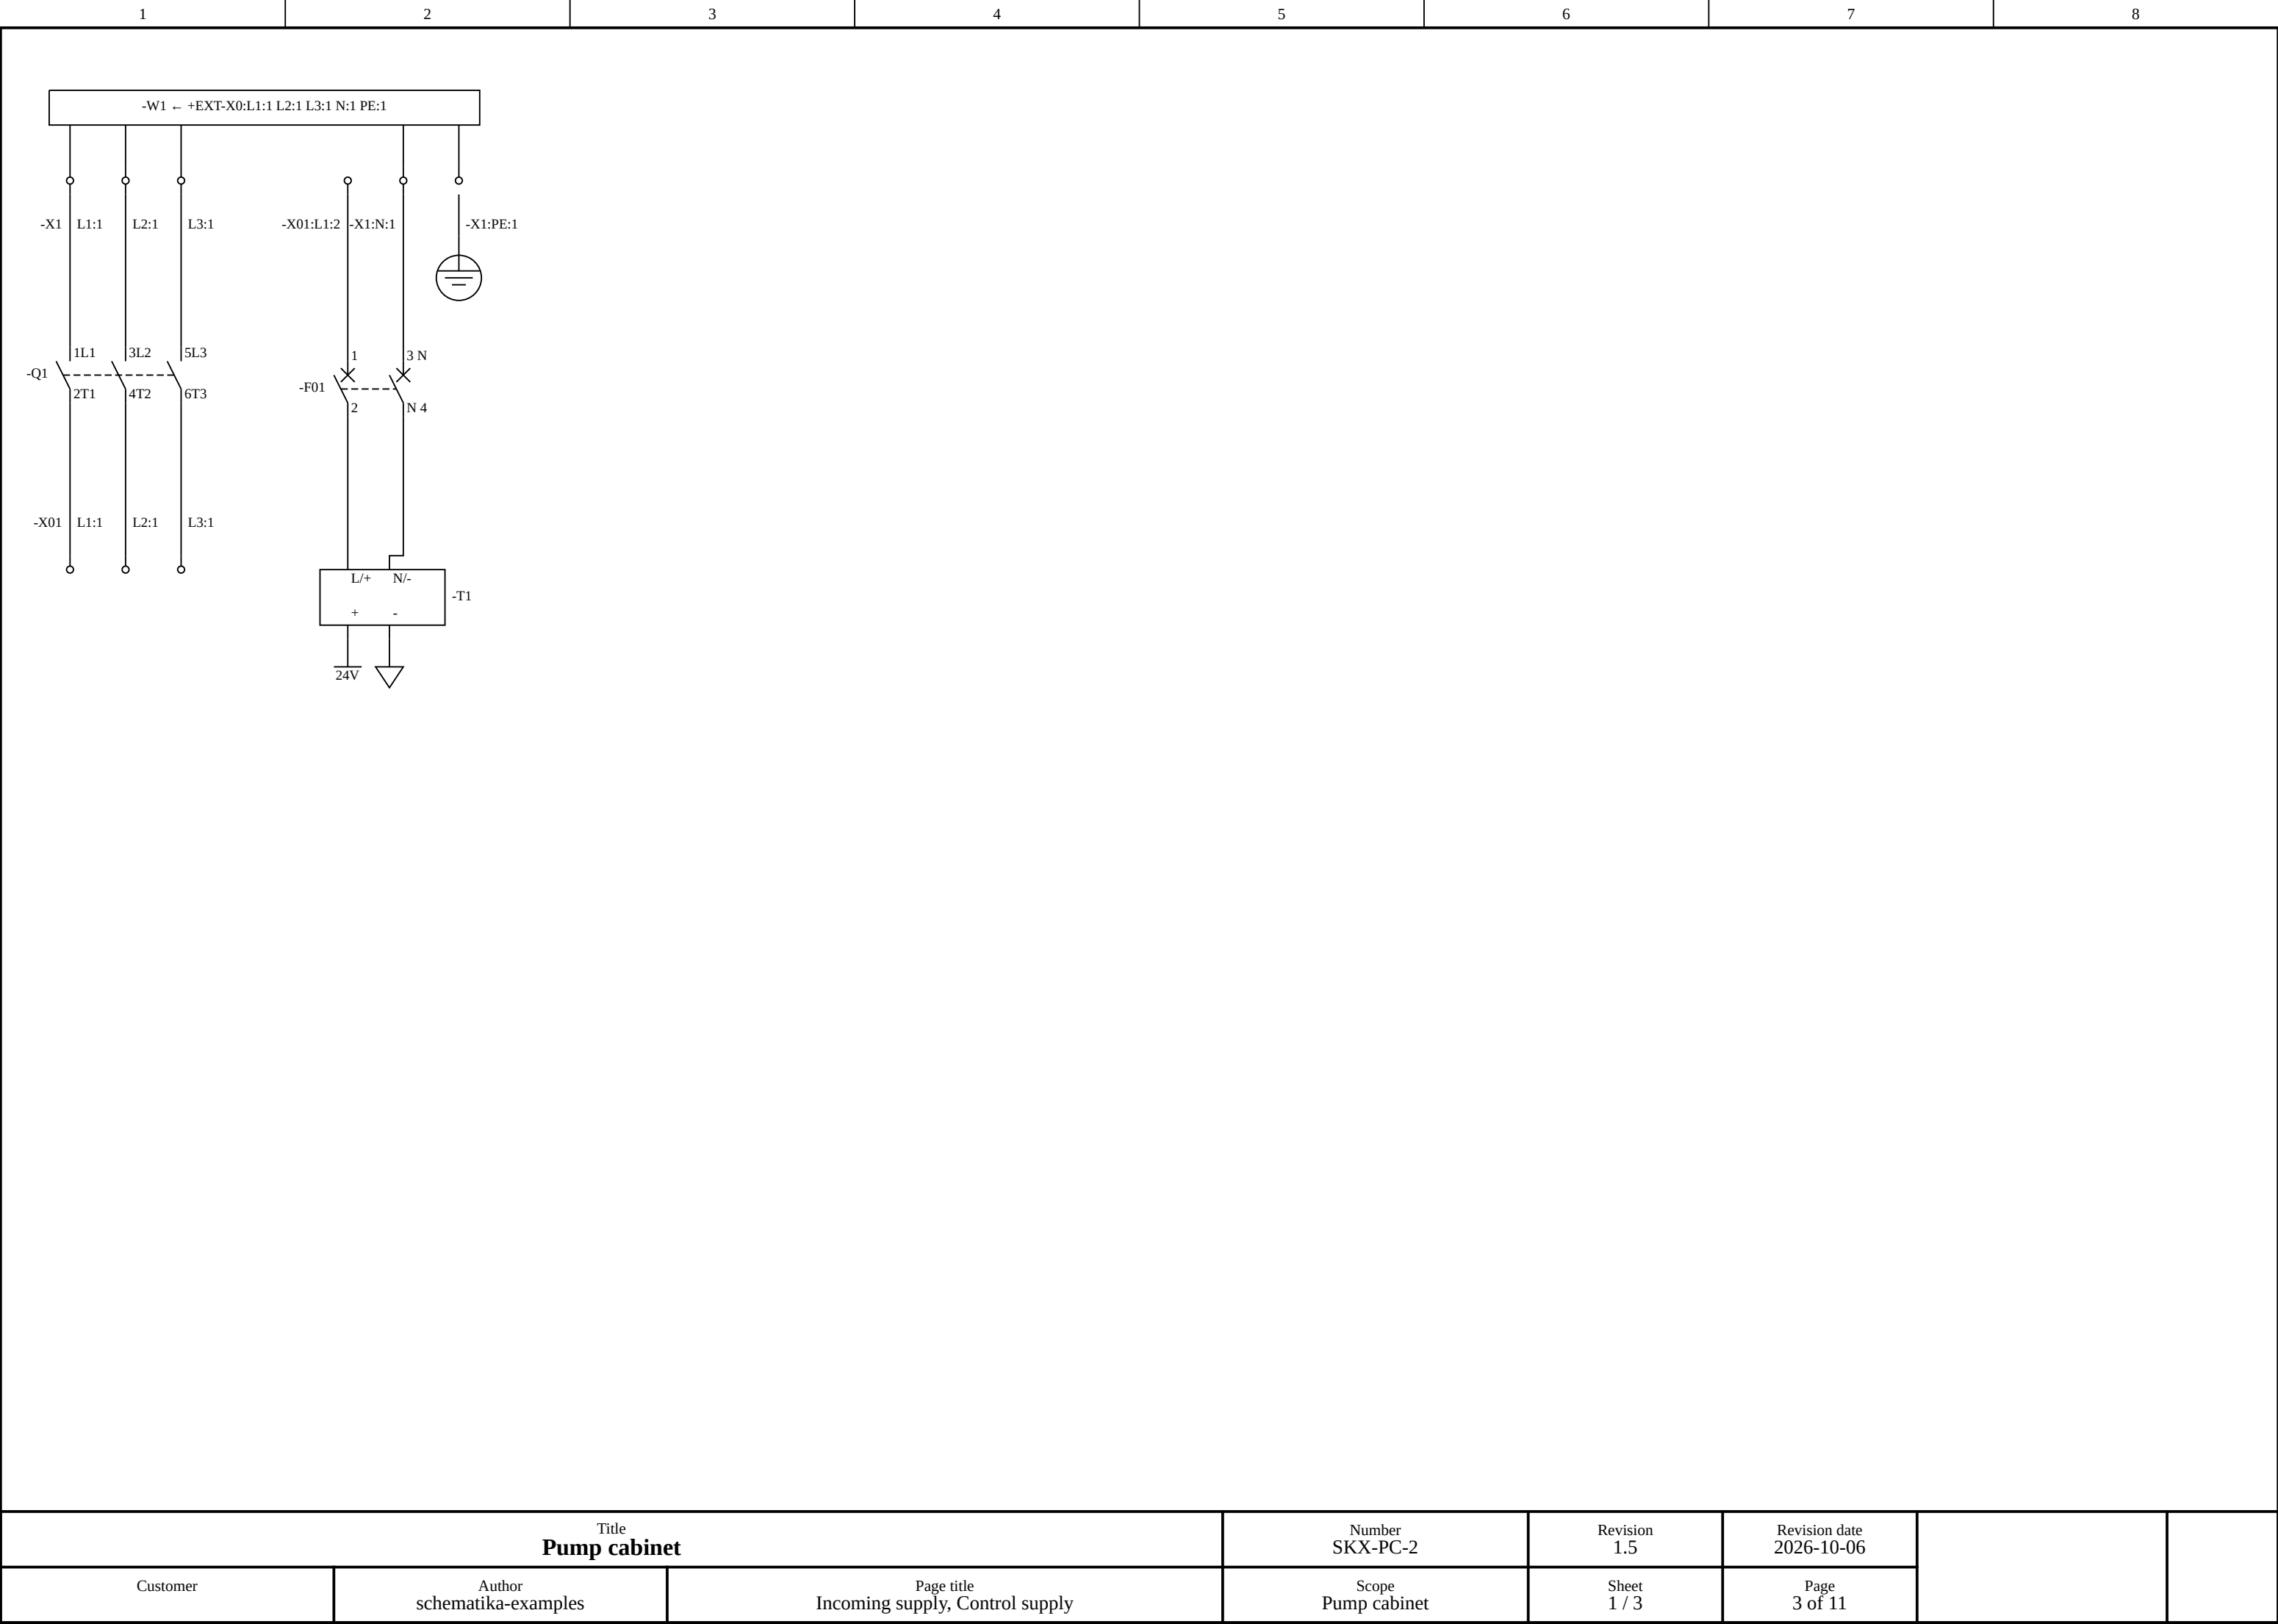

1		2		3		4		5		6		7		8	
Channel designation	Signal	Wired to						Signal name							
-DI1:1	di	-B12:98						P1_OVERLOAD							
-DI1:2	di	-Q11:14						P1_RUNNING							
-DI1:3	di	-B22:98						P2_OVERLOAD							
-DI1:4	di	-Q21:14						P2_RUNNING							
-DO1:1	do	-J1:1						P1_RUN							
-DO1:2	do	-J1:2						P2_RUN							
-DO1:3	do														
-DO1:4	do														

	1	2	3	4	5	6	7	8
-X01								
Designation	Group	Index	Side A	Bridge				
-X01:L1:1	L1	1	-Q1:2T1	T				
-X01:L1:2	L1	2	-F01:1	+				
-X01:L1:3	L1	3	-F11:1	+				
-X01:L1:4	L1	4	-F21:1	T				
-X01:L2:1	L2	1	-Q1:4T2	T				
-X01:L2:2	L2	2		+				
-X01:L2:3	L2	3	-F11:3	+				
-X01:L2:4	L2	4	-F21:3	T				
-X01:L3:1	L3	1	-Q1:6T3	T				
-X01:L3:2	L3	2		+				
-X01:L3:3	L3	3	-F11:5	+				
-X01:L3:4	L3	4	-F21:5	T				

	1	2	3	4	5	6	7	8
-X2								
Designation	Group	Index	Side A	Bridge				
-X2:24V:1	24V	1	-T1:+	┤				
-X2:24V:2	24V	2	-C1:24 V	┤				
-X2:24V:3	24V	3	-C1:+	┤				
-X2:24V:4	24V	4	-J2:1	┤				
-X2:24V:5	24V	5	-Q11:53/NO	┤				
-X2:24V:6	24V	6	-B12:97	┤				
-X2:24V:7	24V	7	-Q11:13/NO	┤				
-X2:24V:8	24V	8	-Q21:53/NO	┤				
-X2:24V:9	24V	9	-B22:97	┤				
-X2:24V:10	24V	10	-Q21:13/NO	┤				
-X2:GND:1	GND	1	-T1:-	┤				
-X2:GND:2	GND	2	-C1:0V	┤				
-X2:GND:3	GND	3	-C1:-	┤				
-X2:GND:4	GND	4	-Q11:A2	┤				
-X2:GND:5	GND	5	-P1:X2	┤				
-X2:GND:6	GND	6	-Q21:A2	┤				
-X2:GND:7	GND	7	-P2:X2	┤				

	1	2	3	4	5	6	7	8
A	-X3							
	Designation	Group	Index	Side A	Side B			
A	-X3:PE:1	PE	1	-X1:PE:1	+EXT-M1:PE			
	-X3:PE:2	PE	2	-X1:PE:1	+EXT-M2:PE			
	-X3:U:1	U	1	-B12:2/T1	+EXT-M1:U1			
	-X3:U:2	U	2	-B22:2/T1	+EXT-M2:U1			
	-X3:V:1	V	1	-B12:4/T2	+EXT-M1:V1			
	-X3:V:2	V	2	-B22:4/T2	+EXT-M2:V1			
	-X3:W:1	W	1	-B12:6/T3	+EXT-M1:W1			
	-X3:W:2	W	2	-B22:6/T3	+EXT-M2:W1			
B								
C								
D								
E								
F								
Title Pump cabinet					Number SKX-PC-2	Revision 1.5	Revision date 2026-10-06	
Customer		Author schematika-examples	Page title Terminal list		Scope Pump cabinet	Sheet	Page 10 of 11	
	1	2	3	4	5	6	7	8

1	2	3	4	5	6	7	8
Mpn	Revision	Manufacturer	Description	Count	Designations		
1757022		Phoenix Contact	PCB connector plug, 3-pin, 5.08 mm pitch	2	-J1; -J2		
2002-1201		WAGO	TOPJOB S feed-through terminal block, 2.5 mm2, grey; 24 A; 800 V	39	-X01:L1:1; -X01:L1:2; -X01:L1:3; -X01:L1:4; -X01:L2:1; -X01:L2:2; -X01:L2:3; -X01:L2:4; -X01:L3:1; -X01:L3:2; -X01:L3:3; -X01:L3:4; -X1:L1:1; -X1:L2:1; -X1:L3:1; -X1:N:1; -X2:24V:1; -X2:24V:2; -X2:24V:3; -X2:24V:4; -X2:24V:5; -X2:24V:6; -X2:24V:7; -X2:24V:8; -X2:24V:9; -X2:24V:10; -X2:GND:1; -X2:GND:2; -X2:GND:3; -X2:GND:4; -X2:GND:5; -X2:GND:6; -X2:GND:7; -X3:U:1; -X3:U:2; -X3:V:1; -X3:V:2; -X3:W:1; -X3:W:2		
2002-1207		WAGO	TOPJOB S ground terminal block, 2.5 mm2, green-yellow	3	-X1:PE:1; -X3:PE:1; -X3:PE:2		
3LD2054-0TK51		Siemens	Switch-disconnector, 3-pole; 16 A	1	-Q1		
3NW7033		Siemens	Fuse holder, 3-pole, 10x38 mm; 32 A	2	-F11; -F21		
3NW8004-1		Siemens	SETRON cylindrical fuse link, 10x38 mm, aM; 4 A	6	-F11; -F21		
3SU1102-6AA40-1AA0		Siemens	Pilot light 22 mm, green, integrated LED 24 V AC/DC	2	-P1; -P2		
5SY6506-7		Siemens	Miniature circuit breaker, 1P+N, curve C; 6 A	1	-F01		
750-402		WAGO	4-channel digital input module, 24 V DC	1	-DI1		
750-504		WAGO	4-channel digital output module, 24 V DC; 0.5 A	1	-DO1		
750-600		WAGO	End module, terminates the internal data bus; no data contacts	1	-E1		
750-8212		WAGO	PFC200 controller, 2nd generation, 2x ETHERNET, RS-232/-485	1	-C1		
LADN11		Schneider Electric	TeSys D front-mount auxiliary contact block, 1 NO + 1 NC	2	-Q11; -Q21		
LC1D09BD		Schneider Electric	TeSys D contactor, 3-pole, AC-3 9 A, 1 NO + 1 NC auxiliary, 24 V DC coil	2	-Q11; -Q21		
LRD08		Schneider Electric	TeSys thermal overload relay, class 10A, 2.5-4 A, 1 NO + 1 NC	2	-B12; -B22		
QUINT4-PS/1AC/24DC/2.5/SC		Phoenix Contact	Power supply, 1-phase, 24 V DC; 2.5 A	1	-T1		
SKX-RIB-2	1.3		Relay interface board	1	-U2		